
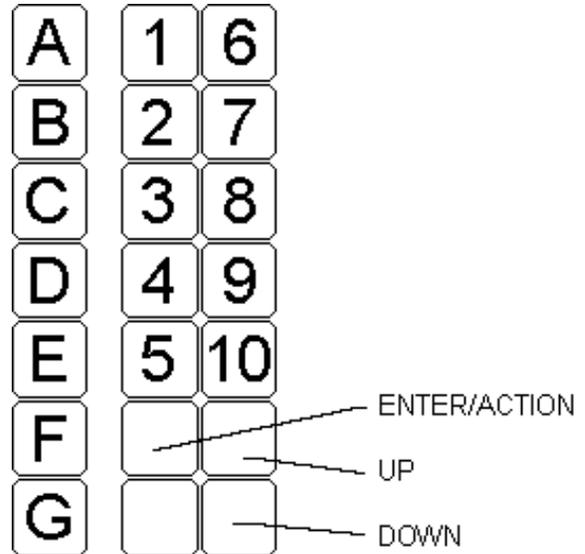


PRICE

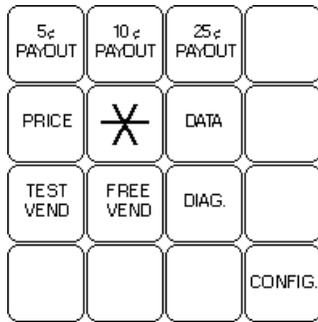

CONTROL PANEL

SELECTION PANEL

1. Press PRICE. The display shows **A0 PR .35**. In this example, the price for the A0 selection is shown to be \$0.35.

Do one of the following :

Use the selection panel to enter a new price.

- OR -

Press the UP key (or the DOWN key) on the selection panel to step to the previous (or next) selection price.

- OR -

Use the selection panel to enter the number of a selection whose price you want to view or change.

**NOTE**

**This method can't be used with the #10 selection. For that, enter the #9 selection then use the DOWN key to step to the #10.**

- OR -

Press a roller function key.

- OR -

Close the door to quit.

**NOTE**

**Don't close the vend door before all prices are properly set.**