

KIT PART NUMBER 6237273

INSTRUCTIONS FOR INSTALLING A BEAN GRINDER DISPENSING BLADE REPLACEMENT KIT

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT NATIONAL VENDORS' PARTS DEPARTMENT

Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.

This kit contains the following:

INDEX	PART NUMBER	DESCRIPTION	QUANTITY
1	6237271	Dispensing blade	1
2	6237272	Screw	3
	6237274	Kit installation instructions	1

INSTALL THE REPLACEMENT DISPENSING BLADE ACCORDING TO THE FOLLOWING INSTRUCTIONS:

Refer to figure 1.

WARNING

GRINDING WHEELS HAVE SHARP CUTTING EDGES!
Disconnect the grinder from its power source before installing this kit.

1. Unplug and remove the bean grinder.
2. Remove the grinder housing cover by removing four screws. Set aside.

CAUTION

Take care not to damage the grinding wheel or cut your fingers during the following steps.

3. Press a rag against the grinding wheel.
4. Using a screwdriver, turn the slotted shaft at the end of the motor assembly counterclockwise while pressing the rag hard against the grinding wheel (**do not contact the grinding wheel with your hand**). This unscrews the grinding wheel/rotor/dispensing blade assembly from the motor shaft.
5. Remove the grinding wheel/rotor/dispensing blade assembly from the grinder housing.
6. Remove the dispensing blade from the back of the rotor by removing three screws. Take care not to lose the three nuts.
7. Assemble the new dispensing blade (1) to the back of the rotor with the new screws (2). Discard the old dispensing blade and screws.
8. Install the grinding wheel/rotor/dispensing blade assembly into the grinder housing. Take care not to gel the shaft cross-threaded.

9. Using the screwdriver, tighten the slotted motor shaft while holding the rag against the grinding wheel to keep it from turning (do not contact the grinding wheel with your hand).
10. Replace the grinder housing cover and secure with the four screws you removed previously.
11. Replace the bean grinder in the merchandiser.
12. Connect the bean grinder to power.
13. Check the coffee grind by the standard test procedure,

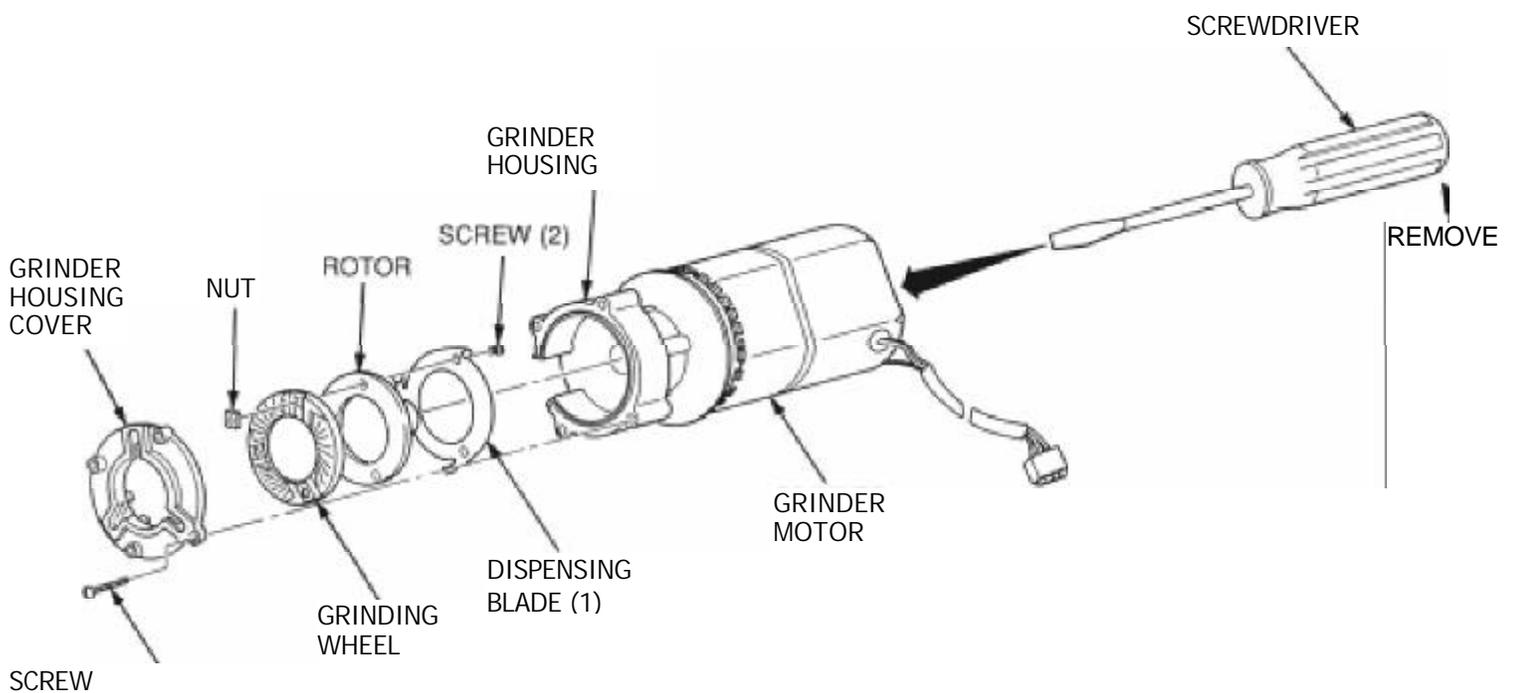


Figure 1