

Technical Bulletin

Bulletin Number: 426 Revision Number: R-01

Release Date: September 3, 1991 Revision Date: July 23, 1998


SUBJECT: CHANGING THE EPROM IN MPC VENDERS

MODELS AFFECTED: All Dixie-Narco MPC Venders

SERIAL BREAK: 0001-3203DO to 0001-6111AR

REASON: To provide instructions on removing / installing EPROMS on the control board of the MPC Electronic Control Board.

1. Remove the power to the door by either unplugging the vender or disconnecting the stack plug located in the lower left hand side of the cabinet. The door power is removed when the lights go off.
2. Remove the cover from the MPC control board assembly.
3. Locate the EPROM and gently pry it out of its socket using a small flat blade screwdriver. INSERT THE SCREWDRIVER BETWEEN THE EPROM AND ITS SOCKET.
4. Install the new EPROM in the socket.
 - A. Note the EPROM key position and make sure the replacement EPROM is in the proper position.
 - B. Assure that the EPROM is aligned properly.
 - C. Insert 1 side of the EPROM in its socket and then insert the other side.
 - D. Visually inspect the EPROM to ensure that all the pins are in the socket and not folded over, under, or between the EPROM and the socket.
5. Reinstall the control board cover.
6. Reconnect the door power.
7. Check the vender program and test the vending machine with coins/bills to confirm proper operation.

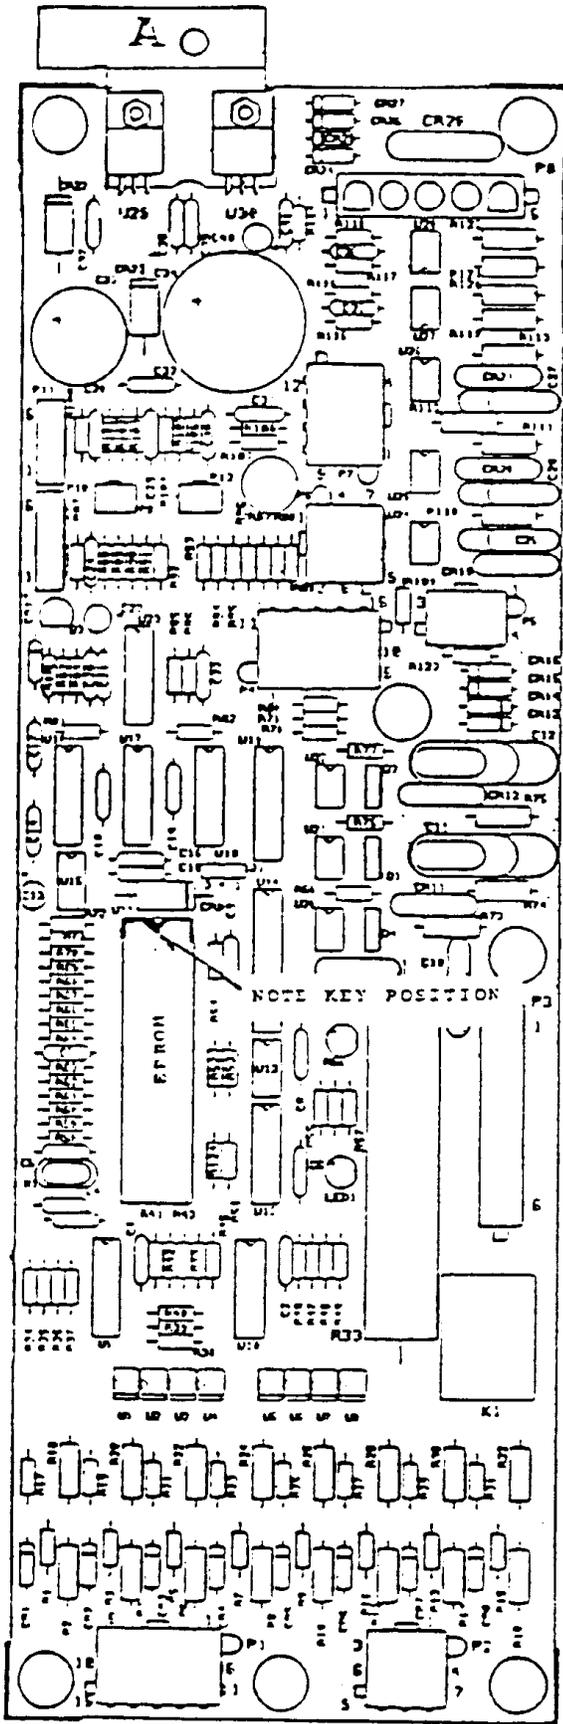

Control Board

