

**INSTRUCTIONS FOR INSTALLING A SANITARY LIFT COVER ON A NATIONAL VENDORS[®],
CROWN LINE[®], SERIES CC OR CANDY CUPBOARD MANUAL CANDY MERCHANDISER
OR A SERIES CP OR PASTRY CUPBOARD MANUAL PASTRY MERCHANDISER.**

Read the following instructions carefully and thoroughly before installing the parts of the Kit. The attaching parts removed from the Merchandiser will be reused. Small coin-envelopes make excellent temporary storage containers for these attaching parts and will help prevent loss.

The Sanitary Left Cover Kit, part number 112-2277, consists of the following parts.

Part Number	Description	Quantity
112-2117	Delivery Extrusion	1
112-2115	Sanitary Lift Cover	1
112-2116	Sanitary Lift Cover Hinge	2
222-2110	"T" Bolt, No.8-32 NC x 3/8"	2
9900-081	Nut/Lockwasher, No.8-32 NC	2
112-2285	Installation Instruction	1

* * *

TO INSTALL THE SANITARY LIFT COVER

1. Place the two Hangers, part number 112-2116, on the Sanitary Lift Cover, part number 112-2115. The Hanger is to be inserted from the front side of the Cover. See Figure 1.

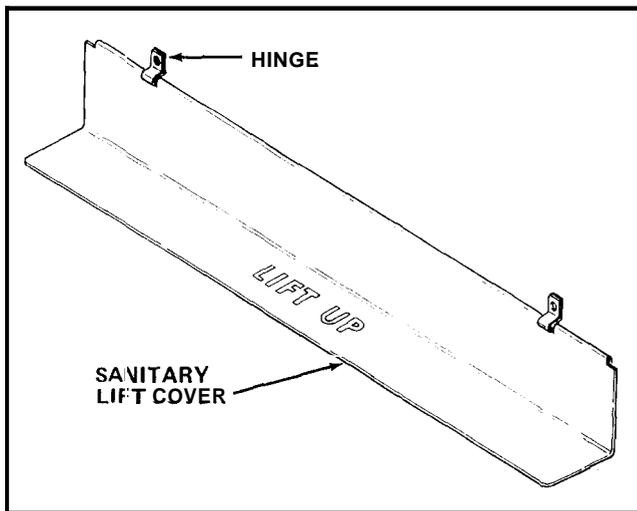


FIGURE 1

2. Open the Cabinet Door and rotate the Door Holder Leg into position.

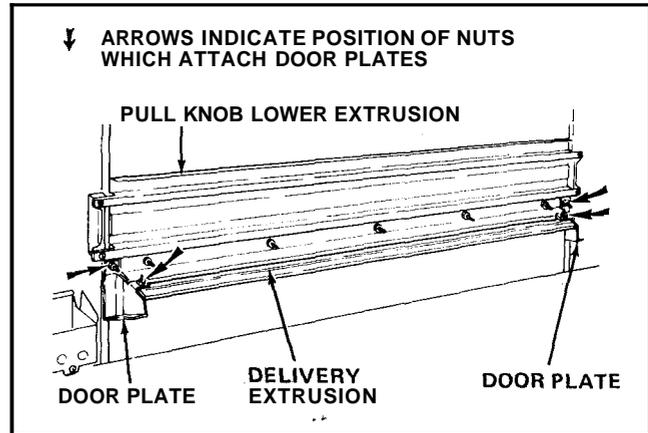


FIGURE 2

- a. Remove the Door Plates from the Door. These Plates will be reused.
- b. Remove the loose "T" Bolts from the slot in the Extrusion to prevent loss of the Bolts.
4. Remove the 5 Nuts which attach the Delivery Extrusion to the Pull Knob Lower Extrusion.
5. Remove the Delivery Extrusion from the Door. This part will not be used when the Sanitary Lift Cover is installed.
6. Place the two "T" Bolts, part number 222-2110, in the slot in the Pull Knob Lower Extrusion. The total number of "T" Bolts in the slot should total nine. See Figure 3. To install the "T" Bolts in may be necessary to loosen the two Screws which attach one end of the Extrusion to the Door. Tighten the Screws as soon as the "T" Bolts are installed.

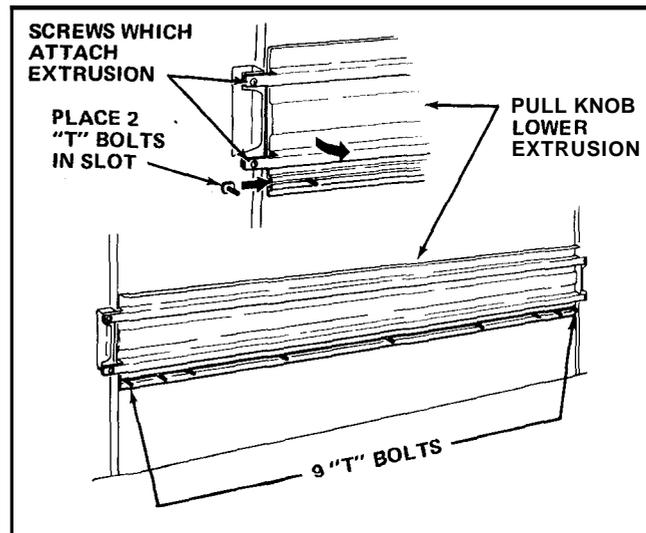


FIGURE 3

7. Install the Sanitary Lift Cover Assembly created in step 1. The Hangers on the Cover Assembly are to be attached to the Pull Knob Lower Extrusion with the third "T" Bolt from each end of the Extrusion. See Figure 4. Loosely attach the Hangers with the two Nuts included in the Kit.

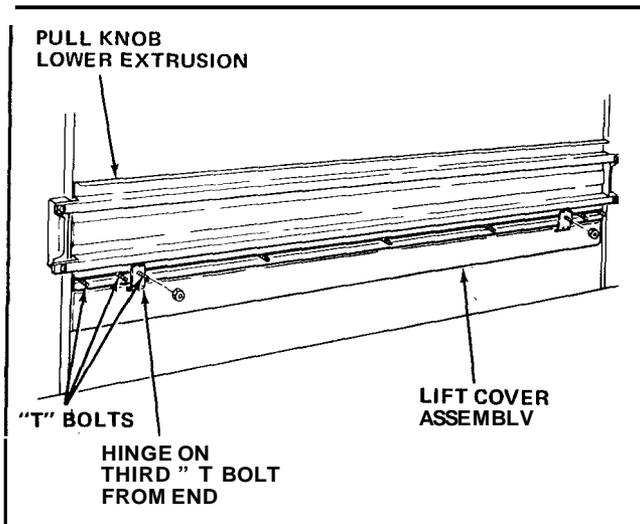


FIGURE 4

8. Adjust the Lift Cover Assembly to center it properly in the Cabinet Door. The Vertical Trim on each side of the Cabinet Door should be under the notch which is in each side of the Lift Cover. See Figure 5. Raise and lower the Lift Cover to assure proper action.

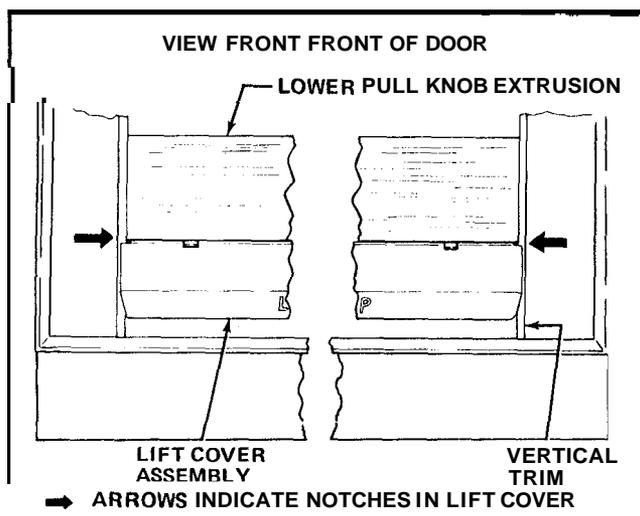


FIGURE 5

9. Tighten the Nuts installed in step 7.
10. Install the Delivery Extrusion, part number 112-2117, included in the Kit. This Delivery Extrusion replaces the Extrusion removed in step 5. At each end of the Extrusion a "T" Bolt extends through the last hole in the Extrusion. Loosely attach the Extrusion by placing a Nut on each of these two Bolts. See Figure 6.

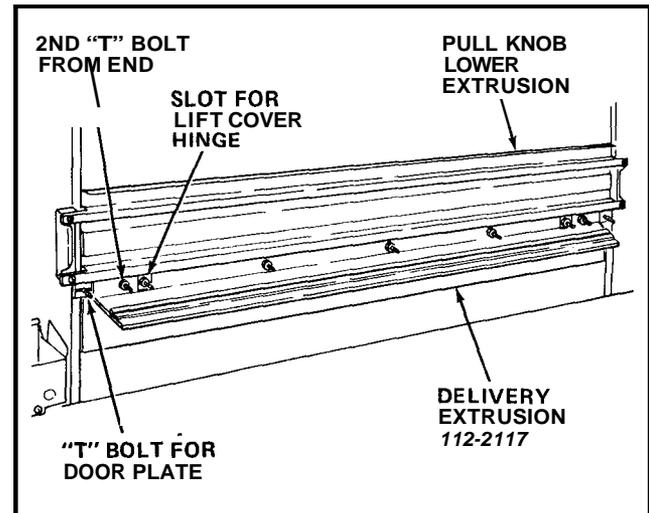


FIGURE 6

11. Place one of the "T" Bolts removed in step 3-b in each end of the slot in the Delivery Extrusion installed in step 10. See Figure 2.
12. Install the Left and the Right Door Plate. These Plates were removed in step 3.
13. Attach the Door Plates with 4 Nuts.
14. Place Nuts on the 3 remaining "T" Bolts to attach the Delivery Extrusion to the Pull Knob Lower Extrusion.
15. Tighten all Nuts securely.
16. Close and Lock the Cabinet Door
17. Raise and lower the Lift Cover until it is loose enough to drop of its own weight when opened.

The Merchandiser may now be put into service.