



INSTRUCTIONS FOR INSTALLING A BASE PLATE ASSEMBLY

CHECK THE PARTS RECEIVED IN THE ACCESSORY WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

If the instructions in your set-up manual are different from these instructions, ignore the instructions in the set-up manual.

Read these instructions carefully before installing the accessory.

Keep these instructions for part numbers and for future reference.

These accessories contain the following:

ACCESSORY NUMBER	INSTRUCTION	LOOSE PARTS BAG ASSEMBLY	BASE PLATE ASSEMBLY
------------------	-------------	--------------------------	---------------------

STANDARD STYLING

1571085	1571158	1571087	2271408
1581022	1571158	1571087	1581023
3631104	1571158	3631105	3631106
4251218	1571158	4250037	4251205
4311194	1571158	4311191	2271408
4851035	1571158	1571087	4111091
3281046	1571158	1571087	3631106

MILLENNIA STYLING

1571159	1571158	1571087	1571161
1581049	1571158	1571087	1581050
3631099	1571158	3631100	3631101
4311190	1571158	4311191	1571161
4851084	1571158	1571087	4851082
4281048	1571158	4250037	4281044
3281047	1571158	1571087	3631101

PARTS INCLUDED IN THE LOOSE PARTS BAG ASSEMBLIES

LOOSE PARTS	QTY	LOOSE PARTS BAG ASSEMBLY				
		1571087	3631100	3631105	4250037	4311191
Base plate bracket	2	6231087	6231087	6231087	4311071	4311071
Base plate slide - RH	1	1411194	4311192	4311192	1411194	4311192
Base plate slide - LH	1	1411195	4311193	4311193	1411195	4311193
Cotter pin	2	9900098	9900098	9900098	9900098	9900098
Bumper	2	N/A	3631103	3631108	N/A	N/A
Screw - 8-32	4	N/A	1451097	9900166	N/A	N/A



**INSTALLING A BASE PLATE ACCESSORY ASSEMBLY ON ALL MODELS EXCEPT:
FOOD SERVICE CABINET, FOODCENTER, SHOPPERTRON**

These instructions cover both standard and Millennia styling. Refer to the appropriate figure while completing the following procedure:

WARNING

DO NOT MOVE THE CABINET WHILE FASTENERS ARE LOOSENEED. THE CABINET WOULD BECOME UNSTABLE AND LIKELY TO TIP AND CAUSE INJURY.

NOTE: For model 411, begin with step 4.

1. Remove the pail(s) from the inside of the merchandiser.
2. Remove the floor liner and filler plate (if present) from the inside of the merchandiser to gain access to the holes as shown.
3. From the left side of the merchandiser, remove the two caps as shown.
4. Loosen the left leg assembly bolts and nuts to allow mounting a base plate bracket.
5. Secure one of the base plate brackets to the leg assembly using the two bolts. Tighten the bolts and nuts.
6. Repeat steps 4 and 5 for the other side of the merchandiser.
7. **If included in your accessory**, install the bumper as shown, using the 8-32 screws.
8. Insert the short arms of the slides into the hinged tabs of the base plate. Position the slide so the notch near the short arm is on the bottom side.
9. Insert the long arms of the slides into the base plate brackets.
10. Insert and secure a cotter pin through the hole in the back of each of the slides.
11. Push the base plate toward the merchandiser cabinet. The front tabs of the base plate brackets should seat in the notches in the long arms of the slides.
12. Replace the parts you removed in steps 1 and 2.

**INSTALLING A BASE PLATE ACCESSORY ASSEMBLY ON FOOD SERVICE CABINET, FOODCENTER,
SHOPPERTRON, MODELS 839, 431, 425**

These instructions cover both standard and Millennia styling. Refer to the appropriate figure while completing the following procedure:



WARNING

DO NOT MOVE THE CABINET WHILE FASTENERS ARE LOOSENEED. THE CABINET WOULD BECOME UNSTABLE AND LIKELY TO TIP AND CAUSE INJURY.

1. Loosen the inner pair of hex head screws from one of the front cabinet leg assemblies.
2. Secure one of the base plate brackets to the leg assembly. Tighten the hex head screws.
3. Repeat steps 1 and 2 for the other side of the merchandiser.
4. **If included in your accessory**, install the bumper as shown, using the 8-32 screws.
5. Insert the short arms of the slides into the hinged tabs of the base plate. Position the slide so the notch near the short arm is on the bottom side.
6. Insert the long arms of the slides into the base plate brackets.
7. Insert and secure a cotter pin through the hole in the back of each of the slides.
8. Push the base plate toward the merchandiser cabinet. The front tabs of the base plate brackets should seat in the notches in the long arms of the slides.



STANDARD STYLING

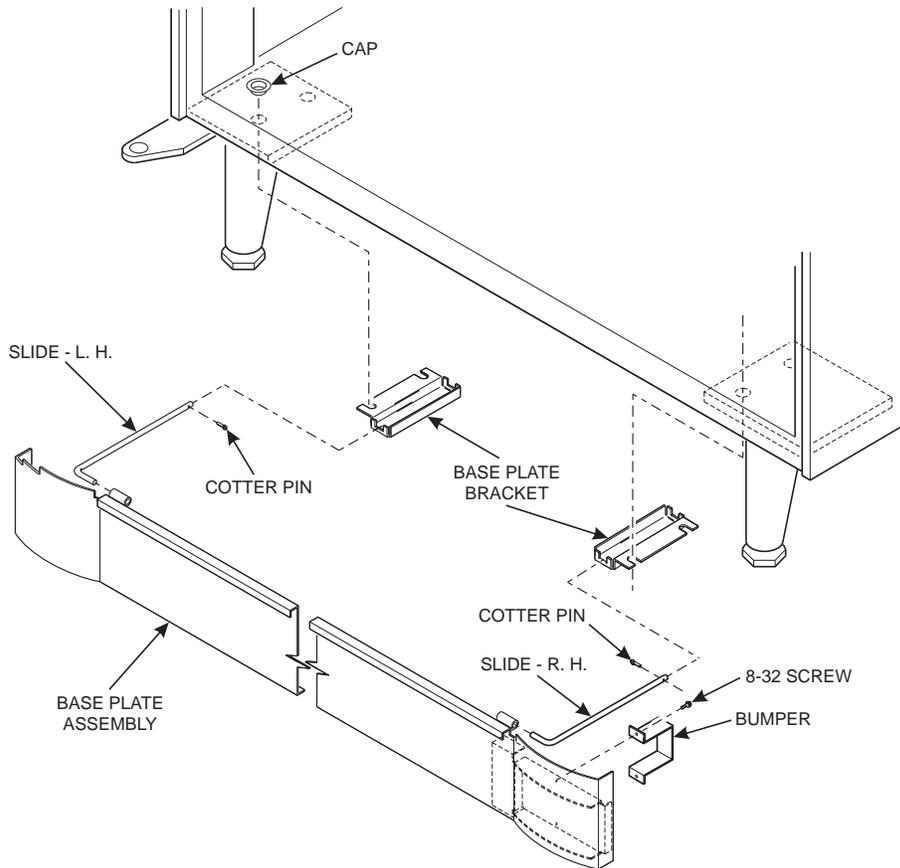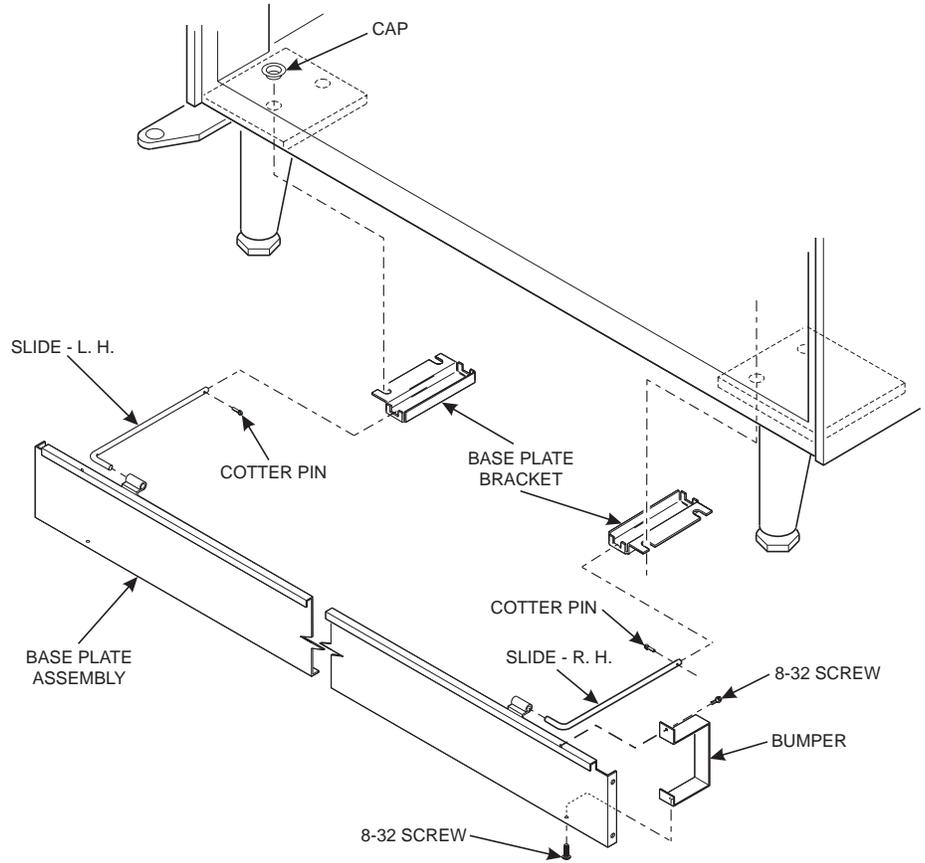

MILLENNIA STYLING