

KIT PART NUMBER 6362071

INSTRUCTIONS FOR INSTALLING CANISTER FILL SHELF AND LATCH FOR 636Q

CHECK THE PARTS RECEIVED IN THE KIT WITH THE PARTS LIST IN THESE INSTRUCTIONS. IF ANY PARTS ARE MISSING, CONTACT THE NATIONAL VENDORS PARTS DEPARTMENT IMMEDIATELY.

Read these instructions carefully before installing the kit.
Keep these instructions for part numbers and for future reference.

THIS KIT CONTAINS THE FOLLOWING :

PART NUMBER	DESCRIPTION	QUANTITY
6362071	KIT-CANISTER FILL SHELF MOUNTING	1
1451097	SCREW-#8-32X.31 HEX HD.TF-BLK.	4
6722032	CANISTER SHELF ASSY	1
6362072	LATCH ASSEMBLY-W/TAPE	1
6362073	TEMPLATE-ALIGNMENT/DRILL	1
6360066	KIT-INSTRUCTIONS	1

1. Read these instructions carefully before installing kit.
2. Turn the machine OFF with the main switch. Failure to do so could result in electrical shock.
3. Clean area on the door where latch will be mounted with isopropyl alcohol.
4. Locate template as shown (horizontal) align 3 edges on door tape or hold in place. (See Figure 1)

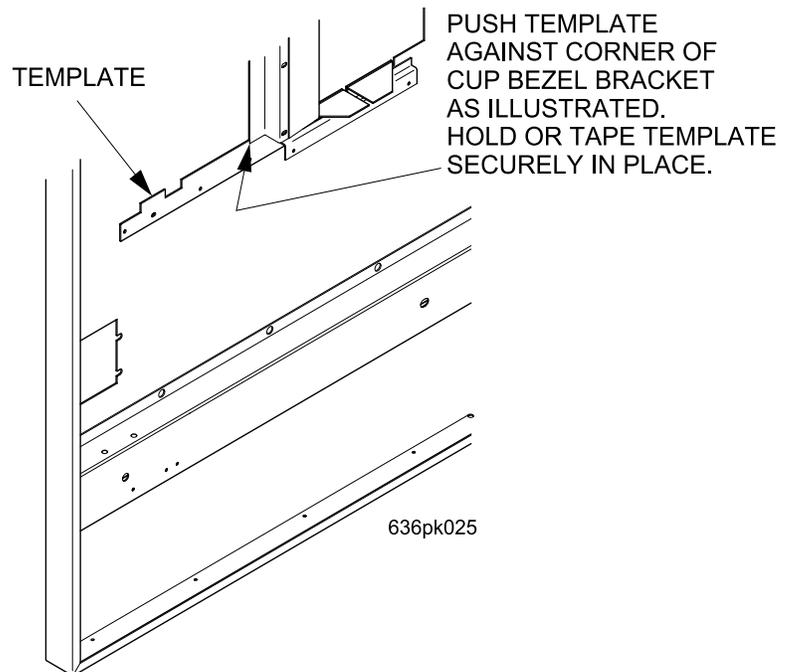


Figure 1

5. Remove backing from tape, locate latch assembly within notch in template. Press and adhere in place.
(See Figure 2)

6. Attach template with 2 provided screws as shown. Drill 2 .141 dia. holes.
(See Figure 3)

7. Remove template & attach canister fill shelf with 2 part #1451097 screws.
(See Figure 4)

8. Completely assembled.
(See Figure 5)

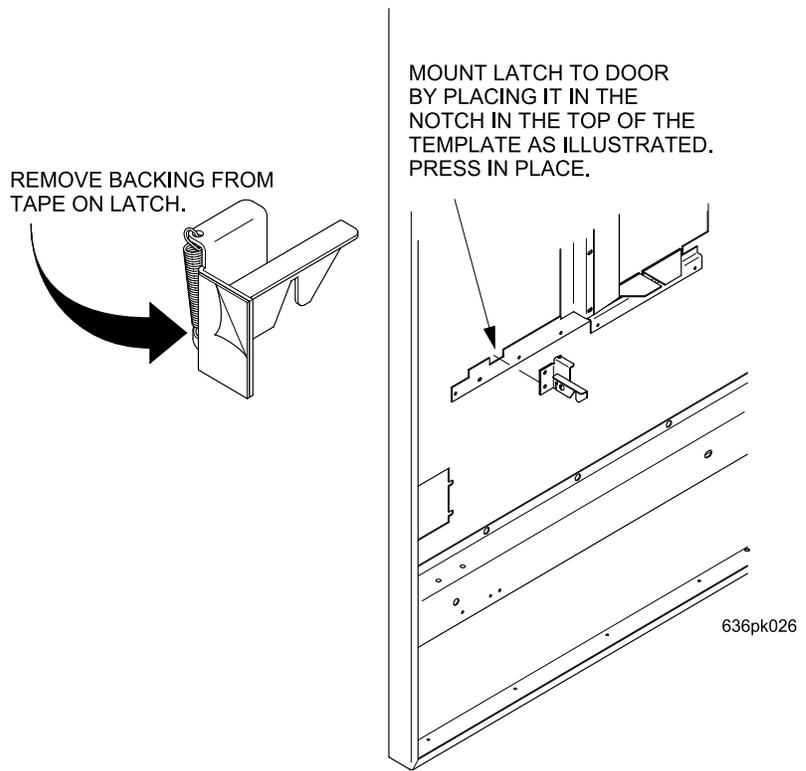


Figure 2

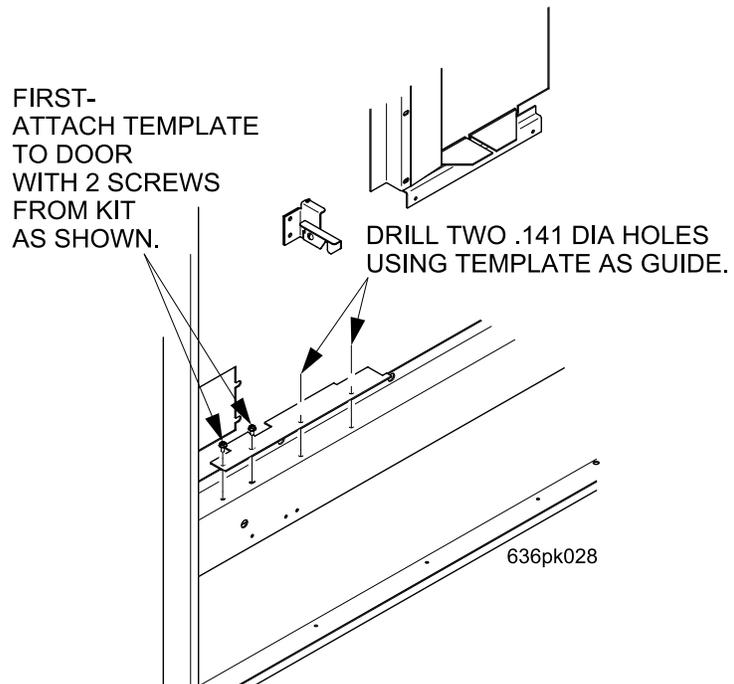


Figure 3

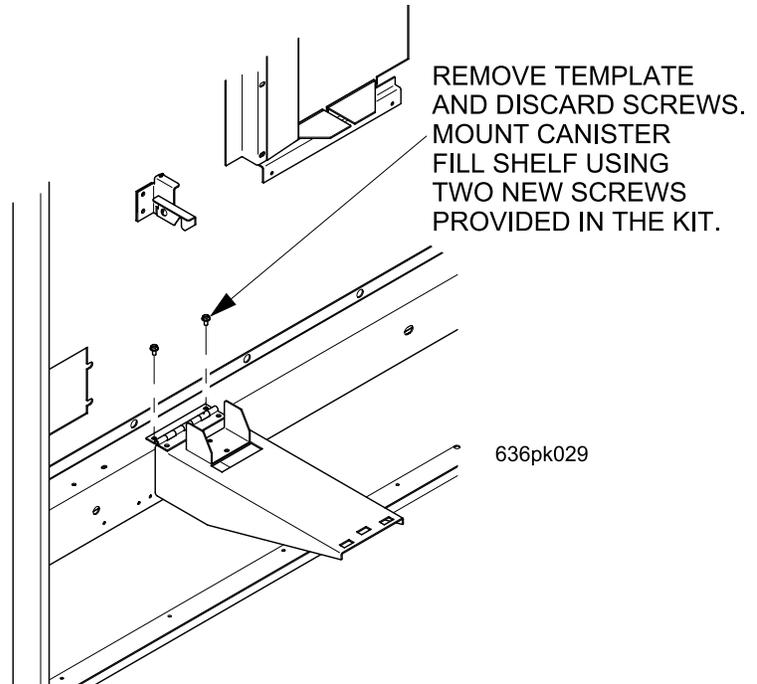


Figure 4

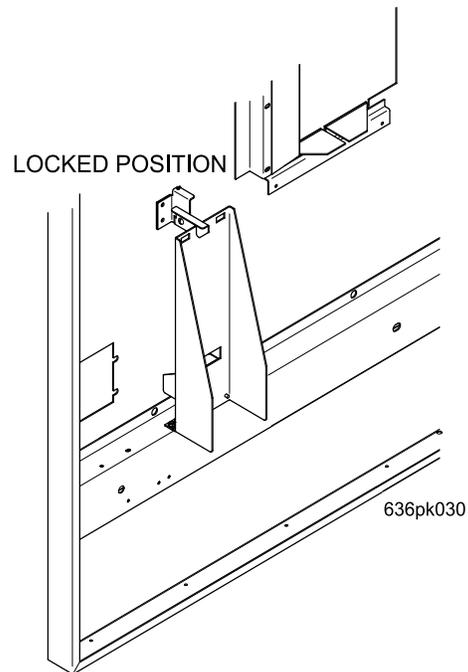


Figure 5