

## Grommet / Standoff

M0010.0

### Grommet (A)

902,001,200.01

**To Install:**


1. Install one grommet per front module. Note: Rear modules do not receive a grommet.  
Install a grommet in the 1-1/8" hole above the "picket fence" area used to install the spacer. See (A), figure 1.

### Standoff (B)


801,903,170.01

**To Install:**

1. Install one standoff per rear module to secure row harness.
2. Locate 3/16" hole in the bottom cap nearest the back of the vender. See (B), figure 1.
3. Press the standoff in position in this hole. See (C), figure 2.
4. Place the row harness in the standoff so the row harness grommet is on the frontside of the standoff. See (E), figure 2.
5. Press the top flanges of the standoff together to lock.

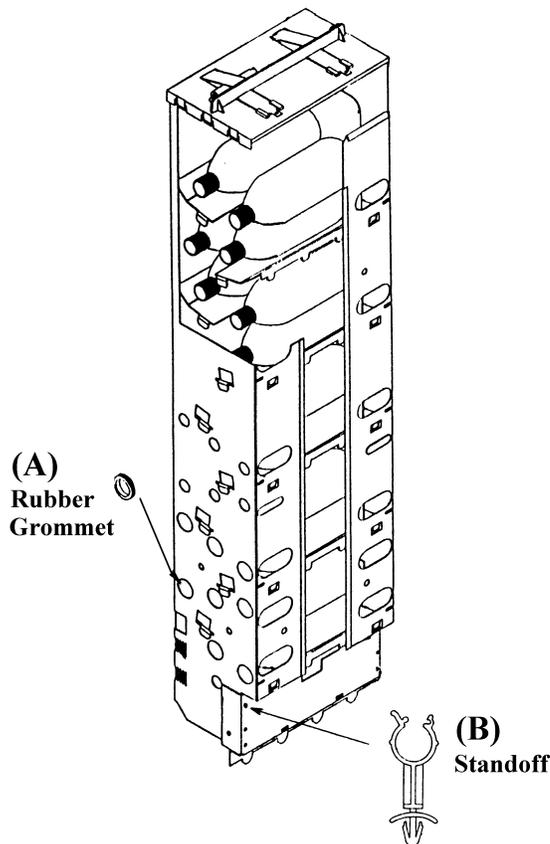

**FIGURE 1**

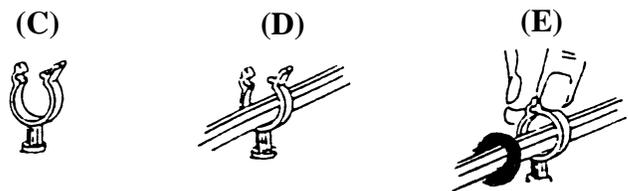

**FIGURE 2**