

# Technical Bulletin

Bulletin Number: 372 Revision Number: R-02

Release Date: October 20, 1988 Revision Date: September 16, 1998


**SUBJECT:** COIN INSERT COVERS - NON VRV (GENERIC ROUND, DR. PEPPER D3, 7UP)

**MODELS AFFECTED:** All Non VRV Generic Round, Dr. Pepper D3, and 7UP


**REASON:** To provide extra strength and security to the coin insert.

Order the parts needed from the list provided:


- |                    |   |
|--------------------|---|
| 1 - 000,005,77x.x6 | Generic Round & Dr. Pepper D3 Coin Insert Cover without correct change light hole |
| 1 - 000,005,85x.x6 | Generic Round & Dr. Pepper D3 Coin Insert Cover with correct change light hole    |
| 1 - 000,005,90x.x6 | 7UP Coin Insert Cover without correct change light hole                           |
| 9 - 900,201,17x.x1 | Carriage Bolt, 1/4-20x1"  |
| 9 - 900,800,67x.x1 | Nut, 1/4-20   |
| 1 - 572,010,40x.x4 | SII Display / Coin Insert Cover Kit (see page 2)                                  |

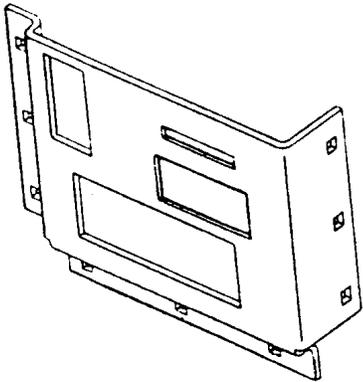

000,005,85x.x6

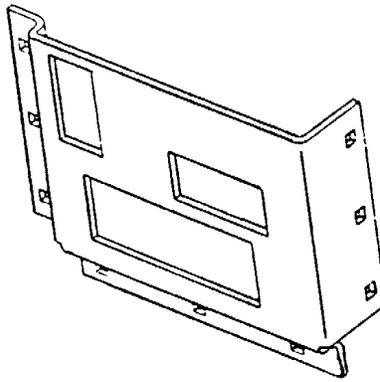

000,005,77x.x6

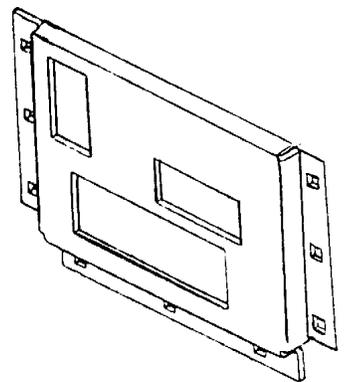

000,005,90x.x6

## INSTALLATION INSTRUCTIONS:

1. Unplug the vender.
2. Place the coin insert cover, to be used, over the coin insert.
3. Align all the cover openings with the openings and parts affected on the coin insert.
4. Ensure that the T-Handle pops out cleanly. Adjust the cover if necessary at this time.
5. Using the cover as a template, mark the holes to be drilled.
6. Remove cover from insert.
7. Drill nine (9)  $\frac{5}{16}$ " ID holes.  
**Caution: Be careful not to drill in to any wiring, parts, or accessories.**
8. Place cover in position.
9. Secure the coin insert cover with carriage bolts and nuts.
10. Test T-Handle, coin return plunger, coin slot for coin insertion, and correct change light for proper operation.
11. Plug in vender and test for proper operation.

---

**572,010,40x.x4**


**SII Display / Coin Insert Cover Kit For Pepsi / Generic Venders**

### Includes:

1 - 572,010,30x.x3	W/A Coin Insert Cover / SII Display
6 - 900,201,17x.x1	Carriage Bolt, $\frac{1}{4}$ -20x1
6 - 900,800,67x.x1	Keys Nut, $\frac{1}{4}$ -20
1 - 801,808,12x.x1	SII Display Protective Lens
1 - 903,835,14x.x1	SII Correct Change Label Non Coke

## INSTALLATION INSTRUCTIONS:

1. Unplug the vender.
2. Place the coin insert cover, to be used, over the coin insert.
3. Align all the cover openings with the openings and parts affected on the coin insert.
4. Ensure that the T-Handle pops out cleanly. Adjust the cover if necessary at this time.
5. Using the cover as a template, mark the holes to be drilled.
6. Remove cover from insert.
7. Drill six (6)  $\frac{5}{16}$ " ID holes.  
**Caution: Be careful not to drill in to any wiring, parts, or accessories.**
8. Place cover in position.
9. Secure the coin insert cover with carriage bolts and nuts.
10. Test T-Handle, coin return plunger, coin slot for coin insertion, and correct change light for proper operation.
11. Plug in vender and test for proper operation.

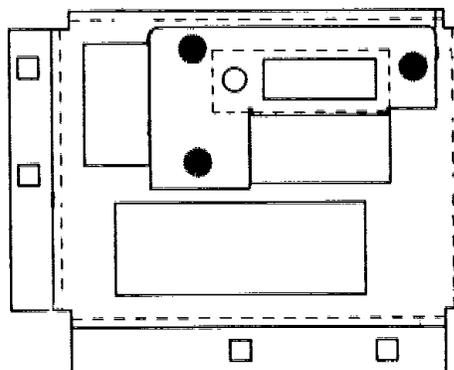

**572,010,30x.x3**