

Technical Bulletin

Bulletin Number: 396 Revision Number: R-02

Release Date: December 22, 1989 Revision Date: January 4, 1999


SUBJECT: VALIDATOR SHIELD FOR ARDAC USA15

MODELS AFFECTED: Dr. Pepper D3 79" High Venders
Seven Up B7 79" High Venders


REASON: To provide a "shield" which, when installed, prevents access to the bill validator via the sign face.

ORDER: **For Dr. Pepper D3 79" Venders**
1 - 453,010,15x.x3 Validator Shield
7 - 900,301,56x.x1 Screw, Phil Pan #8-32x³/₈

For Seven Up B7 79" Venders
1 - 455,010,05x.x3 Validator Shield

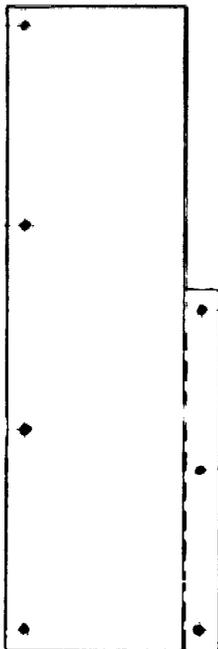


Validator Shield D3
453,010,15x.x3
Figure 1

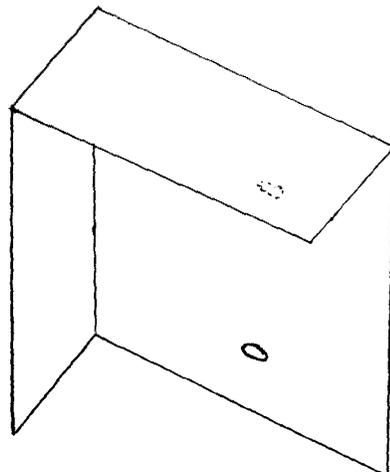

Validator Shield B7
455,010,05x.x3
Figure 2

To Install in Dr. Pepper D3:


1. Hold the shield in position as shown in figure 3.
2. Insert the shield in Area "A", figure 3 (shield all the way to the top) with the shield's flange extending over the main door flange.
3. Use the shield as a template and mark the seven mounting holes.
4. Drill $\frac{9}{64}$ " diameter holes at the seven positions marked in step 3.
5. Place validator shield back in Area "A" and secure with the phil pan screws.

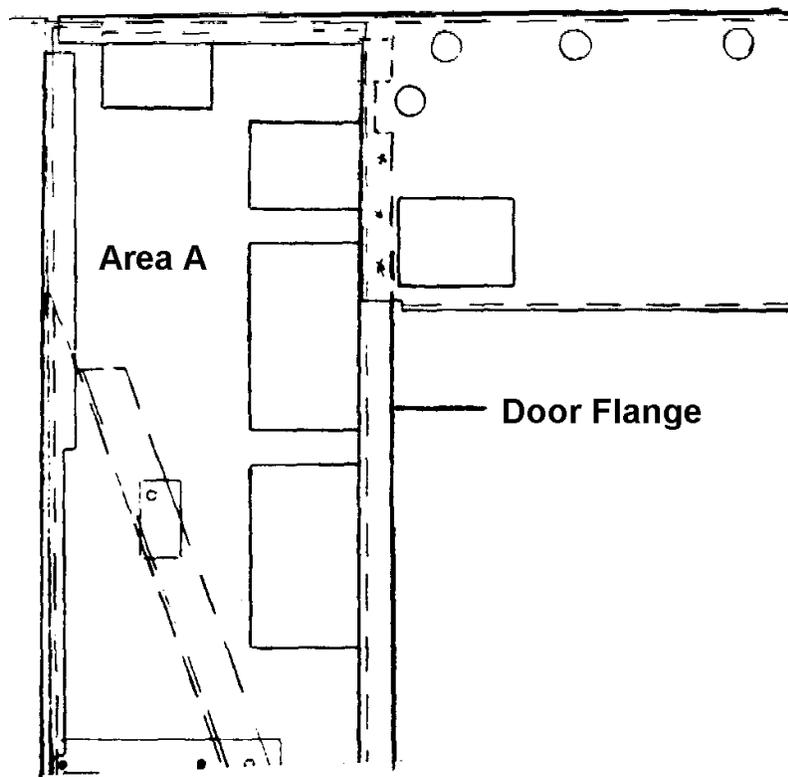

**Inside Main Door - Top Left
Figure 3**

To Install In 7UP B7:

1. Hold the shield in position as shown in figure 4.
2. Insert the shield in the bulkhead above the validator opening. Shield blocks access from sign area through lighting holes over to top of validator.
3. With the shield in position secure it with two self-drilling screws (900,301,65x.x1).

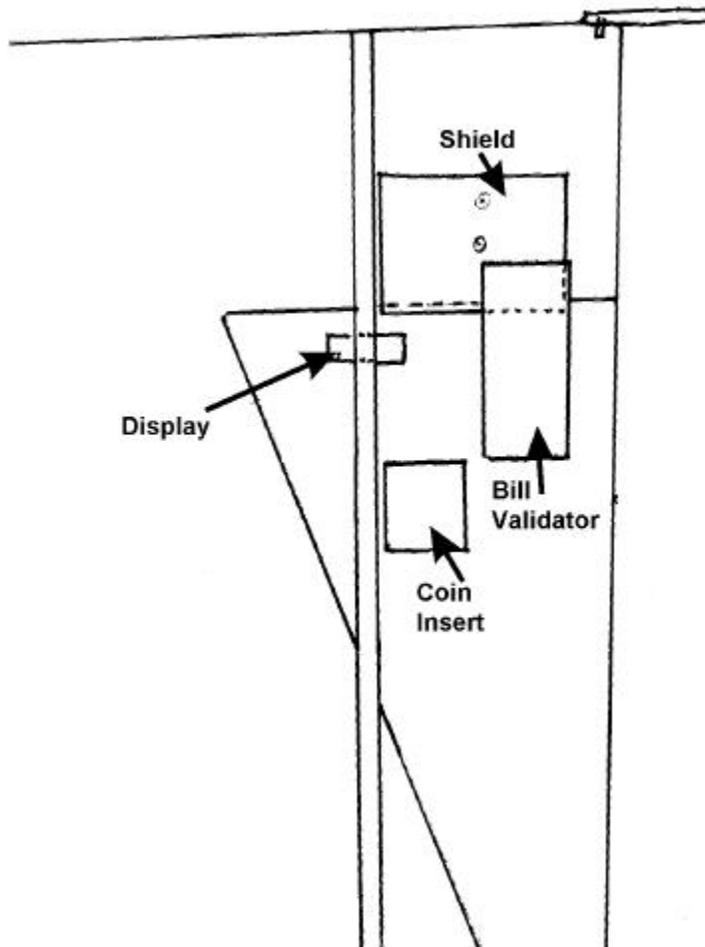

**Inside Main Door - Top Right
Figure 4**