

# Technical Bulletin

Bulletin Number: 510 Revision Number: R-01


Release Date: September 9, 1998 Revision Date: September 10, 1998

**SUBJECT:** VENDER DEFENDER POSITIONING BRACKET

**MODELS AFFECTED:** All VRV Non-Coke Venders Serialized 1970-6462AW to 0001-6492CW.

**REASON:** To provide a field kit to improve the vender defender / changer hopper alignment.

**ORDER:** 1 - 592,010,05x.x3 Vender Defender Positioning Bracket

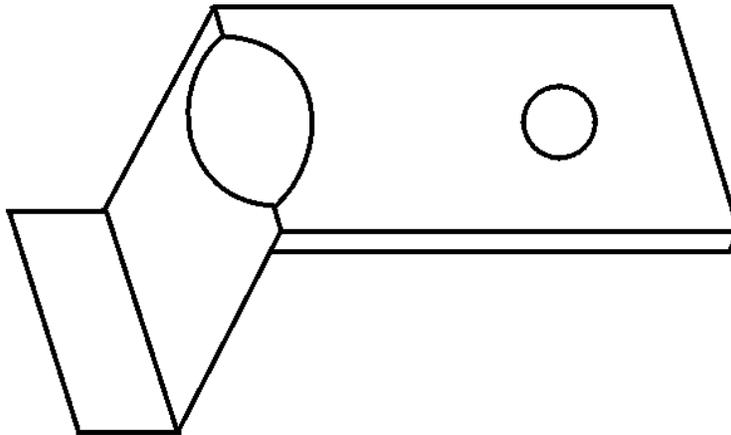

**TO INSTALL:**

1. Locate the two (2) keps nuts on the vandal panel behind the drain opening of the vender defender.
2. Remove the vandal panel keps nut closest to the front of the main door.
3. Place the vender defender positioning bracket in position so the bracket sets behind the drain opening of the vender defender.
4. Install the keps nut removed in step 2.
5. Tighten the keps nut to secure bracket in place.


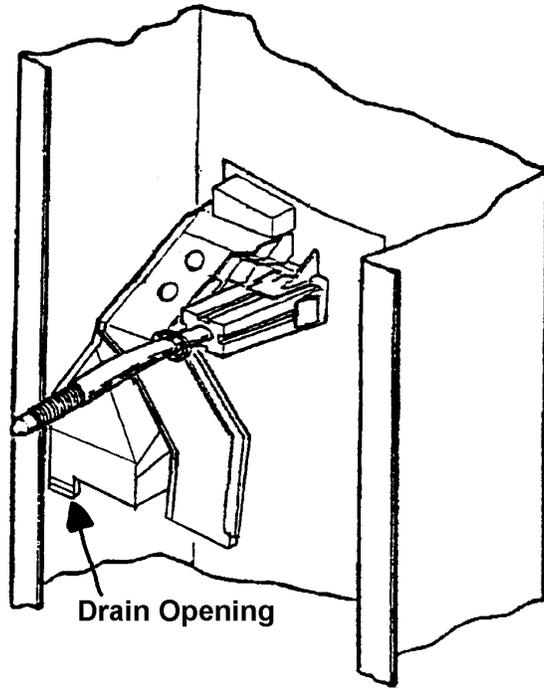


Figure 1

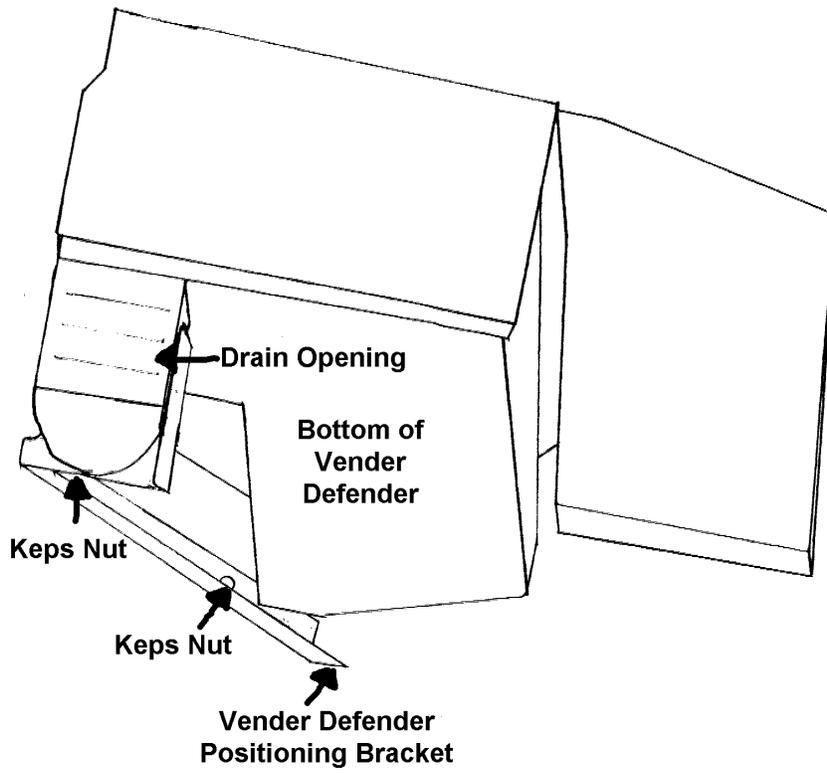

Bottom View  
Figure 2