

SERVICE INFORMATION

M147.0

MODELS AFFECTED: All BevMax Media (6) and BevMax 4 and 3 Model Venders with Top LED Light Bracket Mounting.

MODEL NUMBERS: DN5800-6, DN3800-6, DN5800-4, DN3800-4, DN5800-3, & DN3800-3.

Date: 7/25/17

RE: BevMax 6/4/3 Installation of Top Horizontal LED Light Retainer Clips.



Reason: This service bulletin provides instructions for installing LED light clips directly to top of inside liner of cabinet.

Tools required:

- Angle Drill/Driver
- 1/8 " Drill Bit
- Tape Measure
- Philips driver
- Pop rivet gun

Upgrade Kit #: 65701730

Parts included:(QTY) Part Description

- 2 – Assy LED Clips PN 1672171
- 2 - 1/8" steel rivets PN 90110053
- M147.0 Instructions

SERVICE INFORMATION

Removal Instructions

1. Toggle the AC Distribution on/off switch to the Off position and unplug the main power cord from AC Distribution Box.



2. Unplug and remove the existing top light assembly and bracket. This is secured to top of cabinet by 4 phillip's screws.

Note: Keep sealing material from monetary panel access hole to reinstall if removing entire LED light from machine.



Upper LED Assembly with mounting bracket

New Parts Installation:


3. Drill two .125 diameter holes in the following locations on top of cabinet. **Caution: When drilling, only drill through inside top liner of cabinet. Do not drill through outside shell of cabinet.**

SERVICE INFORMATION

5800 Wide Cabinet:

1st Hole location: 9.75 inches from monetary wall and 8.5 inches from front of vender cabinet.


2nd Hole location: 16 inches from 1st hole and 8.5 inches from front of vender cabinet.

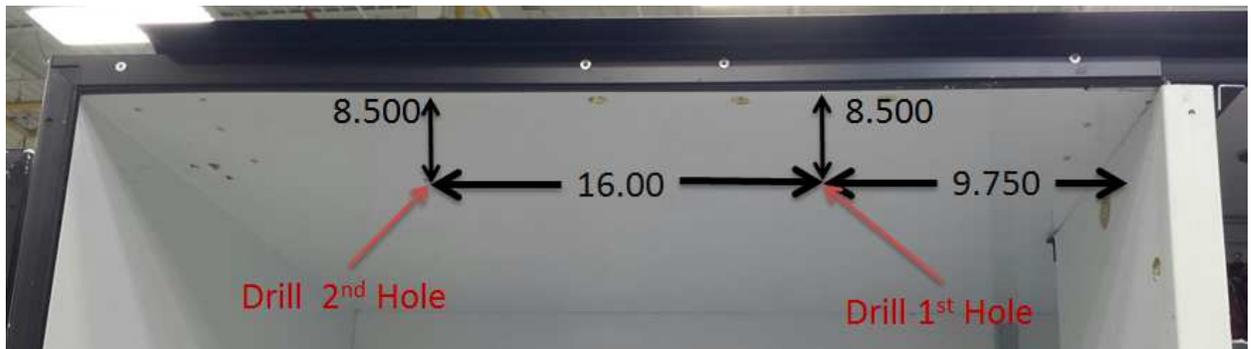

3800 Narrow Cabinet:

1st Hole Location: 5.5 inches from monetary wall and 8.5 inches from front of vender cabinet.

2nd Hole Location: 16 inches from 1st hole and 8.5 inches from front of vender cabinet.

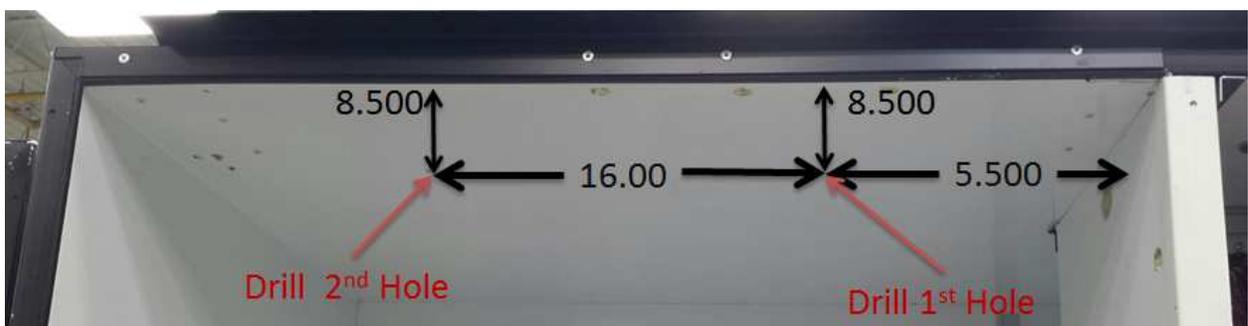

SERVICE INFORMATION

4. Install pop rivets and assembly mounting clips in drilled holes in direction as shown below and use pop rivet gun to fasten to top of cabinet.



5. Install LED light into mounting clips, route and plug in LED harness, and seal monetary area if new LED assembly was installed. **NOTE: LED light should be positioned where light illuminates down to front row of products on shelf.**



6. Plug in main power harness and toggle on/off switch to On position to verify LED operation.

If you have any issues please contact your Crane Merchandising Systems Representative or the Technical Service Department at 803-266-5001 then press 4.