

Technical Bulletin

Bulletin Number: 494 Revision Number: R-01

Release Date: October 4, 1995 Revision Date: October 1, 1998

SUBJECT: COIN HOPPER COVER KIT

MODELS AFFECTED: All Williston built venders with the one-piece plastic hopper and chute.

SERIAL BREAK: 0001-6000CD and higher

REASON: To provide parts to deter vandalism through the coin cup to the changer coin fill tubes and payout switches.

FOR VENDERS SERIALIZED 0001-6281DT AND HIGHER SEE PAGE 2.

FOR VENDERS SERIALIZED 0001-6000CD TO 0001-6281DT WITH ONE-PIECE PLASTIC HOPPER & CHUTE:

ORDER: 491,010,840.04 Hopper Cover Kit
Kit Contents: 1 - 491,050,14x.x3 Anti-theft Cover
2 - 900,902,29x.x1 Tinnerman "U" Clip

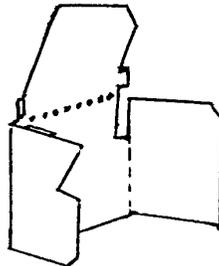


Figure 1

TO INSTALL:

1. Locate the Coin Hopper and Chute.
2. Slide the anti-theft cover on the hopper as shown in figure 2.
3. Bend the top flange (A) down so the two corner tabs are on the outside of the hopper. See figure 3.
1. Secure the anti-theft cover in place with two Tinnerman clips. See figure 3.

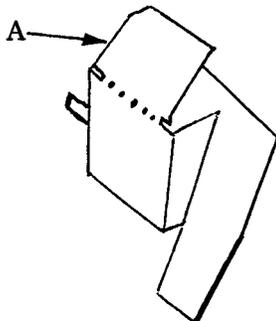


Figure 2

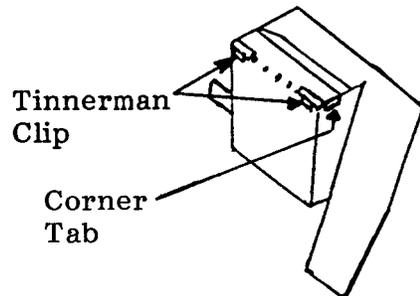


Figure 3

FOR VENDERS SERIALIZED 0001-6281DT AND HIGHER WITH ONE-PIECE SKIRTED HOPPER AND CHUTE:

ORDER: 1 - 491,050,17x.x3 Anti-theft Plate
2 - 901,100,61x.x1 Pop Rivet, $\frac{1}{8}$ "

TO INSTALL:

1. Locate the Coin Hopper and Chute.
2. Open the top flap (A) of the hopper as shown in figure 1.
3. Refer to figure 2 to measure and mark 2 locations to drill $\frac{1}{8}$ " holes.
4. Drill holes.
5. Refer to figure 1 to rivet anti-theft plate to hopper flap.

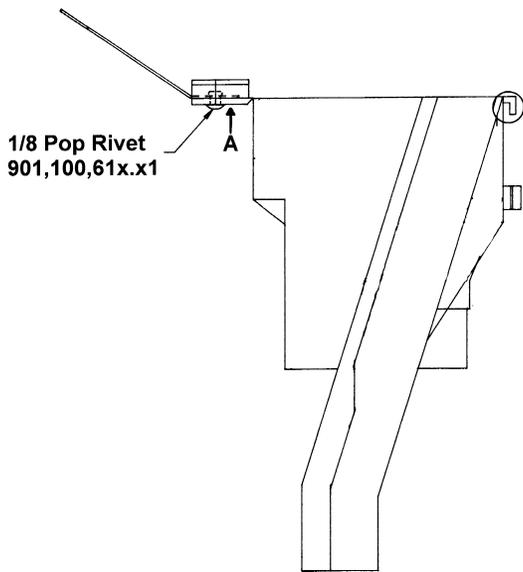


Figure 1

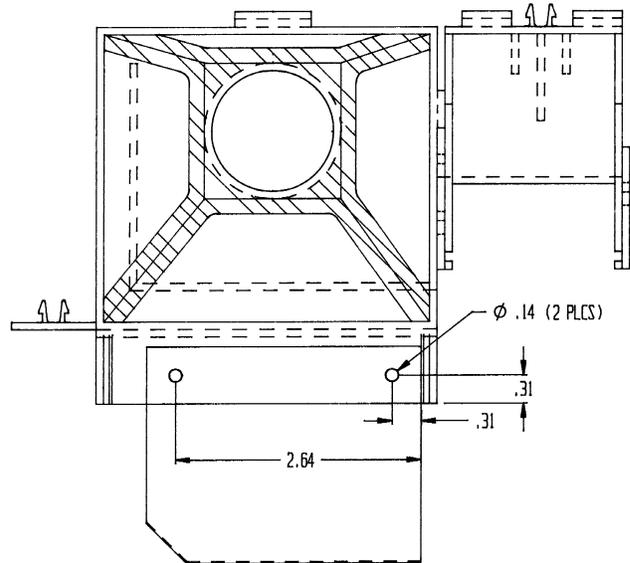


Figure 2

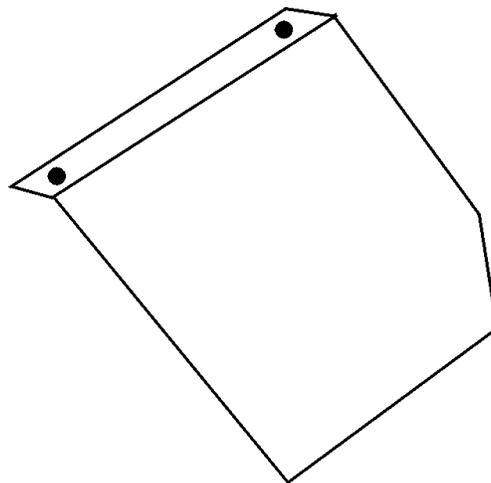


Figure 3
491,050,17x.x3