

RAMP COVER ASSEMBLY FOR BOTTLES

M004.0

Order Ramp Cover Assy.: 594,073,000.03 (9 per module)

To Install:

1. Inspect the ramp cover assembly. Ensure the mandril to the pop rivet does not protrude from the rivet head.
2. Place the center divider to one side of the module.
3. Place the ramp cover assembly in position as shown in figure 1.
Note: One tab is in divider setting #4; this must be the side closest to the center divider. The other tab should be in setting #2; this must be the side farthest from the center divider.
4. Bend the tabs (see figure 2) at a 45° angle to secure the ramp cover assembly to the ramp.
5. Adjust the center divider to its recommended setting.

NOTE: RAMP COVER ASSEMBLY IS NOT USED IN CAN VENDING

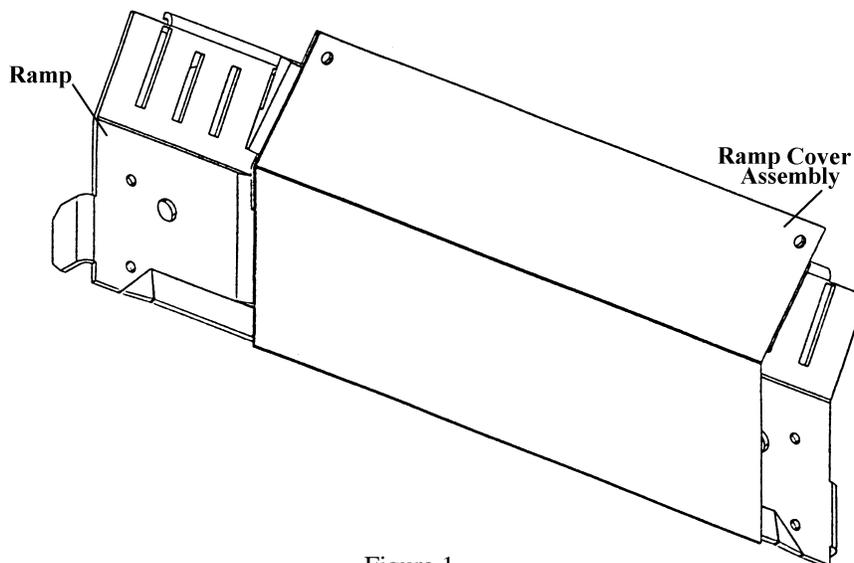


Figure 1
Front View

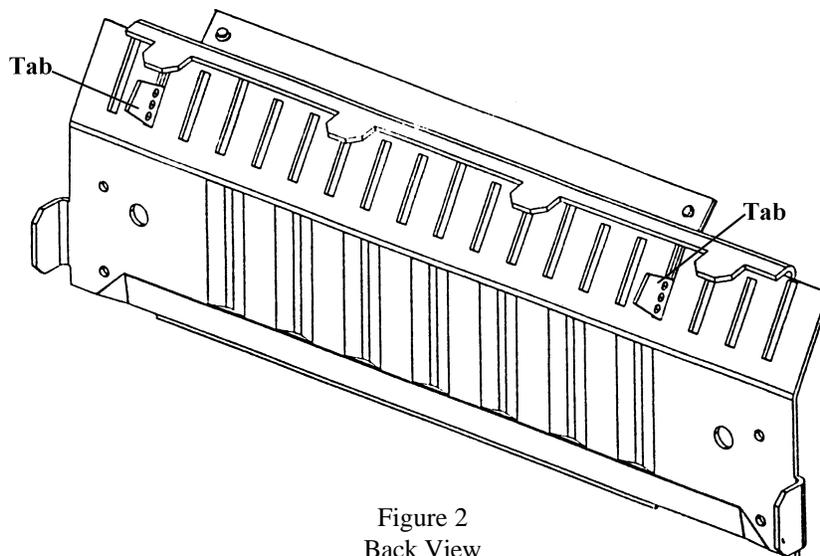


Figure 2
Back View